



# Disc brake Shimano BR-M445 Brake Replacement

Swap Squeaky pads and the rotor brake.

Written By: Froebel Christian



## INTRODUCTION

Swap Squeaky pads and the rotor brake.




## Step 1 — pads



- Disconnect the connector for the hub dynamo


## Step 2 — Remove front

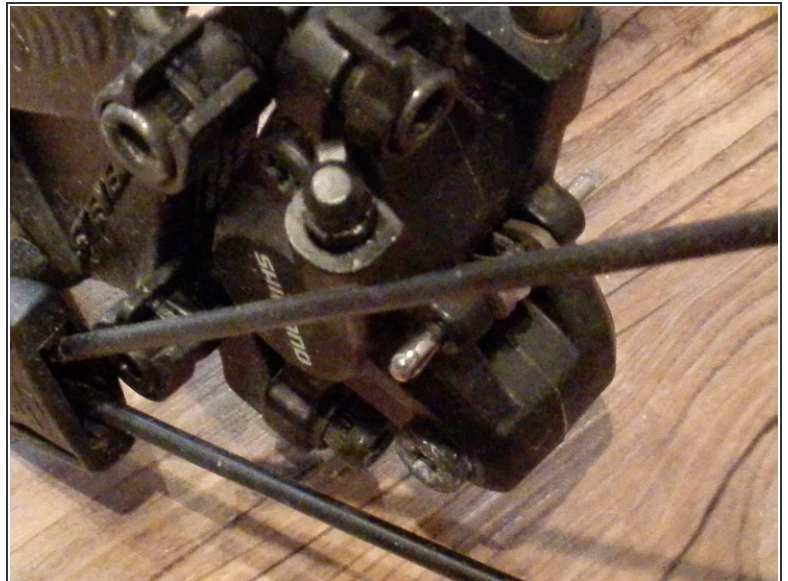

- / Loosen the clamping screw with 4mm Allen key Allen and take the front wheel out of the fork.



### Step 3 — Pull out cotter

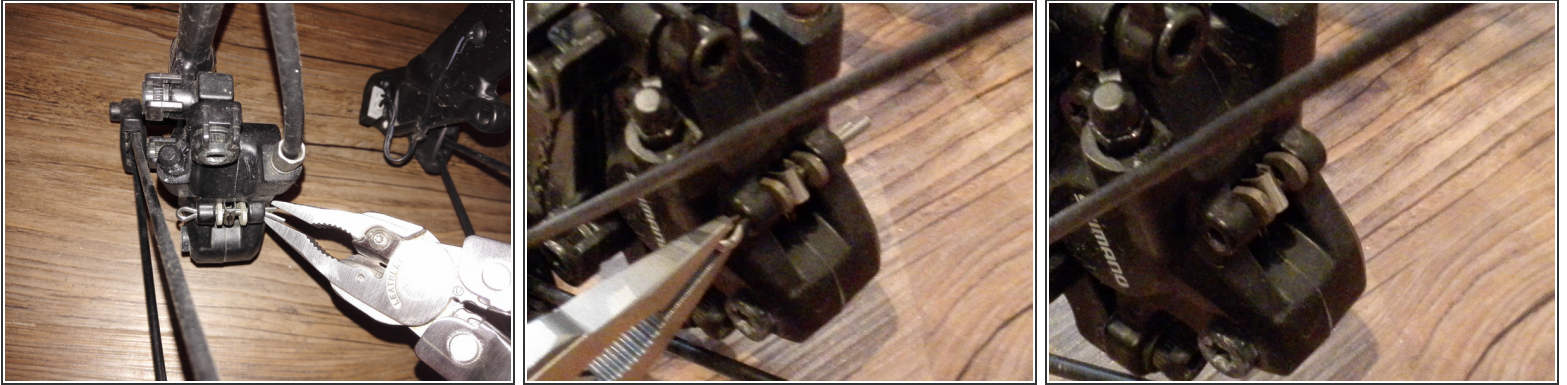

- Squeeze the locking pin with the needle nose pliers at the ends and pull out.

### Step 4 — remove brake pads





- rausdrücken The squeaky brake pads with the needle nose pliers down. (Press with severely worn brake pads the brake piston to the outside).

## Step 5 — Insert the new brake pads



- Insert the new brake pads together with the spring in the caliper.



## Step 6 — Insert cotter

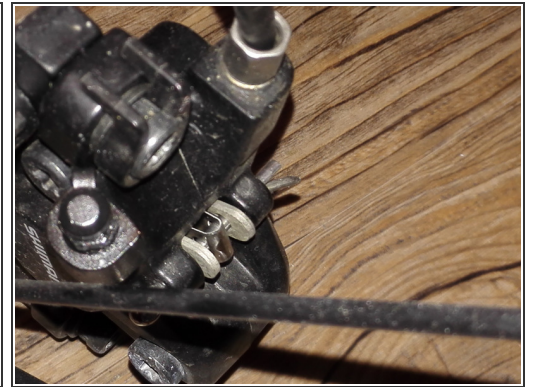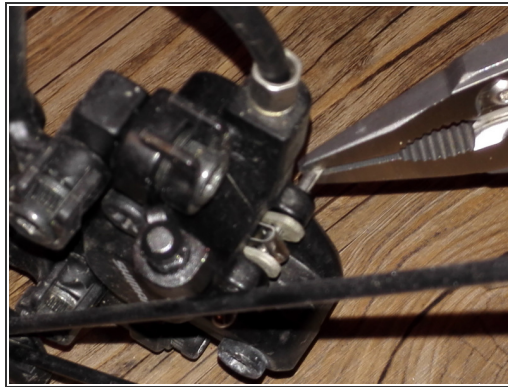

- Insert the new cotter and slightly push apart the ends of the needle-nosed pliers.



## Step 7 — install the front wheel

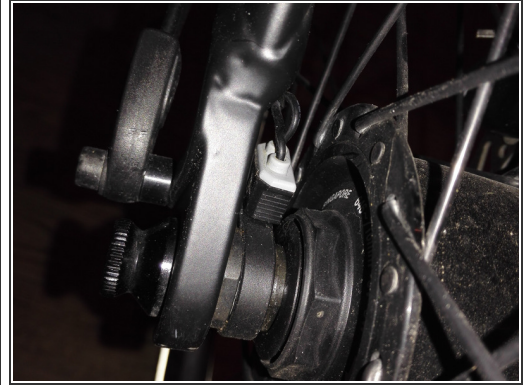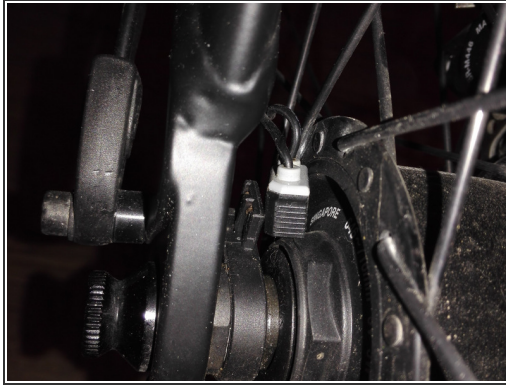

- The front insertion into the fork and tighten the axle bolt with 4mm hex key / Allen.
- testing concentricity and Dynamo.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-06-20 09:28:22 PM.